

# Portable Ventilator Operation Manual

## READ AND SAVE THESE INSTRUCTIONS

**VERY IMPORTANT SAFETY INFORMATION:** Always follow these instructions to avoid bodily injury.

**DANGER:** Do not submerge motor or allow motor to be exposed to water. Personal injury and/or death could result.

**WARNING:** Risk of electrical shock—This fan is supplied with a grounding conductor and GFCI type plug. To reduce the risk of electrical shock, be certain that it is connected only to a properly grounded receptacle.

**WARNING:** Electric shock hazards—May cause severe personal injury or death. For your safety, turn off the electrical power supply at the service entrance before installing, moving, or servicing your fan to avoid any possible electrical shock hazards. Never make adjustments to the fan when in power is on. When plugging in fan, adjusting head and changing speeds. NEVER stand in water. This practice can result in a dangerous or even fatal electric shock.

**DANGER:** Never handle the fan or motor with wet hands or when standing on wet or damp surface or in water. Fatal electrical shock could occur.

**WARNING:** Electric shock hazards—may cause severe personal injury or death. DO NOT UNDER ANY CIRCUMSTANCES REMOVE THE POWER SUPPLY CORD GROUND PRONG OR GROUND FAULT UNIT. For your personal safety, the fan must be grounded. The fan is equipped with a power supply with ground fault circuit interrupting device. Removal or tampering of power cord will void warranty. NEVER USE AN EXTENSION CORD TO CONNECT THE FAN TO AN OUTLET. All installations must be made into a grounded outlet. UNPLUG THE FAN WHEN NOT IN USE.

**WARNING:** To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This appliance had a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit outlet, contact a qualified electrician. Do not attempt to bypass this procedure.

**CAUTION:** Read and follow all instructions before operating fan. Do not use fan if any part is damaged.



### RULE FOR SAFE OPERATION

- Never insert fingers or any other objects through the grill guard when fan is in operation.
- Disconnect the fan when moving from one location to another.
- Disconnect the fan when removing guards for cleaning.
- Be sure fan is on a stable, flat surface when in operation.
- Do not use fan in windows. Rain may create electrical hazard.

### Features:

Large capacity motor with E-class, Long endurance. Specially designed axial propellers, high static pressure, high flow rate, excellent strength.

Parts name	
1	Handle
2	Power cord
3	Drum
4	Grille
5	Blade
6	Switch
7	Motor

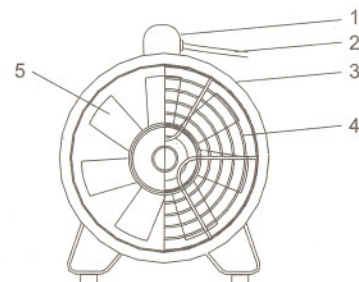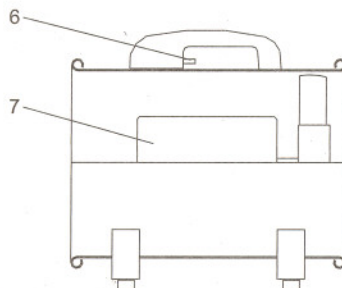

Model	Blade dia	Voltage	Frequency	Phase	Poles	Watts	Flow rate	Speed	Static pressure
	(mm)	(V~)	(Hz)			(W)	(m <sup>3</sup> /min)	(r/min)	(Pa)
<b>39012</b> (STFJ-30)	300	120	60	1	2P	430	83	3300	520