



FLASHING SIGNAL LIGHT OWNER'S MANUAL



WARNING:
Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

Item# 18812

FLASHING SIGNAL LIGHT OWNER'S MANUAL

Thank you very much for choosing a NORTHERN TOOL + EQUIPMENT CO., INC., Product! For future reference, please complete the owner's record below:

Model: _____ Purchase Date: _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This machine is designed for certain applications only. The distributor strongly recommends this machine is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the machine until you have first contacted the distributor to determine if it can or should be performed on the product.

For technical questions and replacement parts, please call 1-800-222-5381.

TECHNICAL SPECIFICATIONS

Size:	4 3/4in. x 4 7/8in.
Voltage:	12V DC
Current :	0.3A
Flash Rate:	90 FPM, Flicker flash mode
Mount :	Magnet Mount
Weight:	1 lbs.

ASSEMBLY AND OPERATION INSTRUCTIONS

Carefully remove the beacon and place it on a flat surface. Examine the unit for transit damage, broken lenses, etc. If damage is found, contact the transit company or distributor. Do not use damaged or broken parts.

Permanent

Position the unit in the desired mounting location. Using the base as a template, mark the mounting hole locations. Drill three 6mm mounting holes, and drill one hole for power wire routing. The use of a grommet is recommended for wires passing through compartment walls. Mount the beacon using #10 hardware.

Magnet


This product comes complete with a magnet, a eleven foot Cord and a cigarette lighter plug.

Note: These units are not sealed on the bottom. For operation in an extremely moist environment or as added protection against moisture, sealing the wire exit hole on the bottom with a pliable caulking material is recommended.

WARNING

1. Maximum recommended vehicle speed for safe operation using the Magnet Mount model is 40 mph on a well maintained road, when fitted to the center of a vehicle roof of steel construction. Higher speeds could cause the mount to fail, resulting in the beacon flying off of the vehicle, which could cause damage to other vehicles and injury or death to the passengers. The magnet mount is not intended as a permanent mounting for the beacon. The magnet mount unit must be mounted on a magnetic surface (i.e. no fiberglass, etc.). Insure that the magnet is kept clean.
2. The positive line must have a 3 amp fuse, as shown. A switch may be used to control the on/off function.

FLASHING SIGNAL LIGHT OWNER'S MANUAL

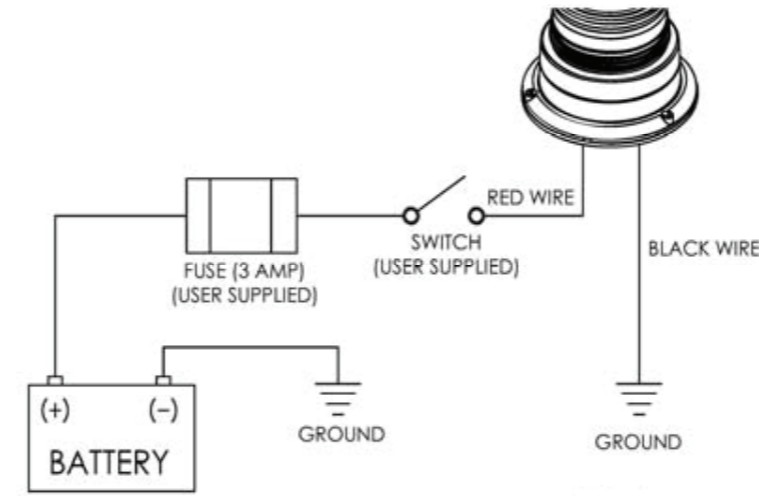

Important! This unit is a safety device, and it must be connected to its own separate, fused power point to assure its continued operation should any other electrical accessory fail.

Note: Operating the vehicle without the lens installed on the product may result in damage that will NOT be covered under warranty.

FLASHING SIGNAL LIGHT OWNER'S MANUAL



Distributed by
Northern Tool & Equipment Co., Inc.
Burnsville, MN 55306-6936
NorthernTool.com
Made in China.