

Installation and Operating Instructions for MODEL 336 JUKE BOX ELECTRONIC HORN

Your purchase of a WOLO horn is a perfect choice to compliment your vehicle. Our horns are manufactured with the finest of materials. Each horn is bench tested before it is packaged to assure workmanship and quality, so you will have many years of reliable service.

IMPORTANT: THIS HORN SHOULD NOT BE USED AS A REPLACEMENT FOR VEHICLE ORIGINAL EQUIPMENT HORN. ADDITIONALLY, IT IS NOT TO BE USED AS A WARNING DEVICE. MODEL 336 JUKE BOX IS FOR OFF THE ROAD AND SHOW USE.


MOUNTING CONTROL KEYBOARD

1. Select a mounting location that will not interfere with air bags or drivers vision.
2. Using the double-sided foam adhesive tape provided, mount the keyboard to selected location. Make sure that mounting surface is free from dust, wax etc. A clean surface is necessary so that double-sided tape will hold properly. **IMPORTANT:** ADHESIVE HOLDING POWER BECOMES MAXIMUM IN ABOUT 24 HOURS. LIMIT MOVING OR PUTTING PRESSURE ONTO THE KEYBOARD UNTIL THEN.

MOUNTING SPEAKER

3. Select a convenient location in the engine compartment that is dry and safe from the engines exhaust manifold heat. Always face the speaker in a downward position. This will help prevent water from entering into the speaker. Using the speakers mounting bracket as a template, mark hole locations (3) and drill using a 1/8 inch drill bit. Secure speaker with self tapping screws provided (3). Make sure that the speakers opening is not blocked by any components which could reduce its loudness.

WIRING

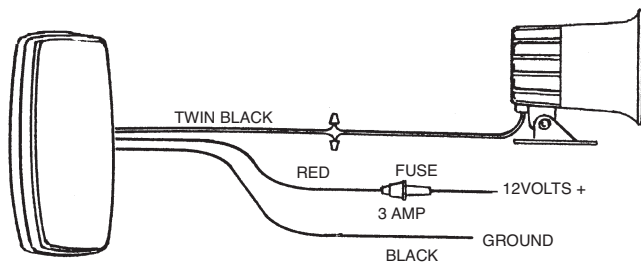

4. **TWIN BLACK**, is connected to the speaker in the engine compartment. Route wires through fire wall to speaker. Connect either wire to one of the speaker wires. Then connect remaining wire to other speaker wire.

5. **RED WIRE**, is connected to the fuse-block or a under dash wire that has power (+) 12 volts when the ignition is on.

6. **SINGLE BLACK WIRE**, is grounded. Secure wire under a bolt in the dashboard area, make sure that the **METAL** surface around the bolt is clean of rust and paint to make a good electrical connection.

TESTING

7. Make sure all wires are secured and connections are properly taped.
8. Put the vehicles ignition on to power your JUKE BOX during testing.
9. Turn the JUKE Box's **VOLUME** control to the right. The green L.E.D. power indicator will light to show that the horn is now ON.

OPERATION

A. TO PLAY MUSIC: Press the red button marked **SELECT** once. The Juke Box will beep and the **yellow orange** L.E.D. marked **music** will be illuminated. Using buttons numbered 1-17 you can now play your desired musical tune. Use the on/off **VOLUME** knob to control loudness.

B. TO PLAY PIANO: Press the button marked **PIANO**, the **yellow** L.E.D. marked PIANO will be illuminated. (If L.E.D. does not turn on press the select button then the piano button). Buttons numbered 1-17 can be used as a piano keyboard using the musical notes above each button. Use the on/off **VOLUME** knob to control loudness.

C. TO RECORD: Press the button marked **RECORD**, the **red** L.E.D. marked RECORD will be illuminated. (If L.E.D. does not turn on press the select button then the record button). Buttons numbered 1-17 can be used as a piano keyboard. Using the musical notes above each key you can record up to 48 notes. To start recording press any musical key followed by the one of the beat key's on the right side of the keypad (1/4, 1/2, 3/4, 1 or 2). The beat keys programs how long each musical note will play. Repeat procedure until you finish recording tune. Press the PLAY button to hear recorded tune. Use the

VOLUME knob to control loudness. **IMPORTANT:** Your recorded musical tune will remain in the Juke Box's memory until the horn or the vehicles ignition is turned off.

D. TEMPO: To change the speed of a song, press the TEMPO button before playing music or recorded tune.

E. FULL: To play all of the 34 programmed songs consecutively press the FULL button.

Our technicians are available to answer your questions, Monday through Friday from 8 AM to 4 PM EST 1-888-550-HORN (4676).

WARRANTY

Wolo Manufacturing Corporation ("Wolo") warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping. Mail to:

Wolo Manufacturing Corp. • One Saxwood Street, Deer Park, NY 11729
Attn: Warranty Service
E-mail: tech@wolo-mfg.com

©2006 Wolo Mfg. Corp.
All Rights Reserved