

LEA Y GUARDE ESTAS INSTRUCCIONES

PRECAUCIÓN: Lea y siga todas las instrucciones antes de operar el ventilador. No use el ventilador si alguna pieza estuviera dañada o faltara.

ADVERTENCIA: Para disminuir el riesgo de incendio o descargas eléctricas, no exponga este producto a la lluvia y asegúrese de que el ventilador esté en un lugar seco y protegido. No use el ventilador con ningún dispositivo eléctrico.




NORMAS PARA UNA OPERACIÓN SEGURA:

1. Nunca intente reparar el ventilador si no está autorizado para ello. Si el ventilador está en funcionamiento, asegúrese de que el ventilador esté en funcionamiento.
 2. Desenchufe el ventilador si usted debe desplazarse de un lugar a otro.
 3. Desenchufe el ventilador al retirar las rejillas de protección para limpiarlas.
 4. Asegúrese de que el ventilador esté en un lugar seco y protegido.
 5. No use el ventilador en un lugar húmedo o con lluvia.
- ADVERTENCIA:** Asegúrese de que los tornillos de las rejillas de protección DEL ANTERA y TRASERA estén bien empujados en la posición de fijación antes de poner el ventilador en funcionamiento.

HIGH VELOCITY DRUM FAN OWNER'S MANUAL

INSTRUCCIONES DE OPERACIÓN

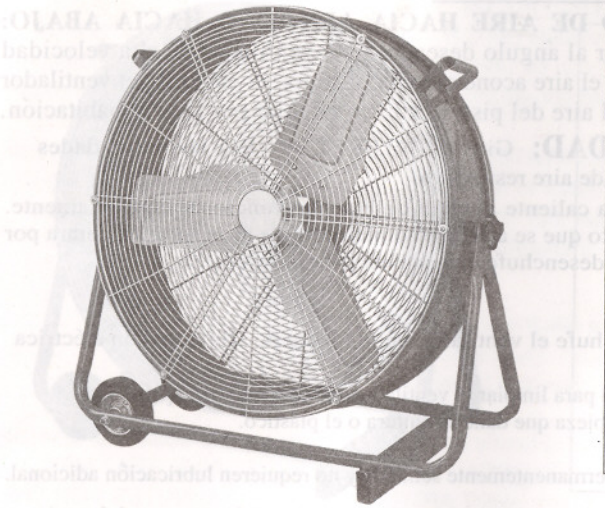

MODEL

10289
(FE-60DFOL)

IMPORTANTE: Antes de operar el ventilador, asegúrese de que el ventilador esté en un lugar seco y protegido. No use el ventilador en un lugar húmedo o con lluvia.

VOLTIOS	AMPERIOS	WATIOS (W)
120V-60Hz	8.0	960

1-800-230-4488

READ AND SAVE THESE INSTRUCTIONS

CAUTION: Read and follow all instructions before Operating Fan. Do not use fan if any part is damaged or missing.

WARNING: To Reduce The Risk Of Fire Or Electrical Shock, Do Not Expose To Water Or Rain.

To Reduce The Risk Of Fire Or Electrical Shock, Do Not Use This Fan With Any Solid State Speed Control Device.

RULES FOR SAFE OPERATION:

1. Never insert fingers or any other objects through the grill guard when fan is in operation.
2. Disconnect the fan when moving from one location to another.
3. Disconnect the fan when removing guards for cleaning.
4. Be sure fan is on a stable, flat surface when in operation.
5. DO NOT use fan in windows. Rain and moisture may create electrical hazard.

CAUTION: Do not alter the Fan's assembly.

WARNING: Be sure FRONT and rear GUARD screws are completely screwed down in locking position before operation.

If the supply cord is damaged, it must be replaced by a special cord or service agent or a similarly qualified person in order to avoid a hazard.

OPERATING INSTRUCTIONS

TO ADJUST AIRFLOW UPWARD OR DOWNWARD: Tilt fan head to the desired angle. This high velocity fan can be used alone or in conjunction with air conditioning. Rotating the fan head upward serves to pull air from the floor and circulate it throughout the entire room.

SPEED CONTROL: Rotate SWITCH to LOW AND HIGH speeds for respective air velocity. It is normal for the motor to feel warm to touch after continuous operation. This fan features a thermostat that will automatically shut off should it overheat for any reason. If this happens, immediately unplug the fan from the outlet.

CLEANING

WARNING: Unplug from electrical supply source before cleaning:

1. Use soft damp cloth to clean. Then wipe with dry cloth.
2. Do not use a cleaning solution that is harmful to paints or plastics.
3. Do not bend the blades.
4. The motor bearings are permanently sealed and do not require additional lubrication.

IMPORTANT: SURGES IN ELECTRICAL POWER OR EXCESSIVE HEAT MAY CAUSE THE FAN TO TURN OFF. WAIT APPROXIMATELY 15 MINUTES FOR THE FAN TO RESUME OPERATION.

MODEL	Watts (W)		Amps (A)		Volts
	Low	High	Low	High	
10289 (FE-60DFOL)	170	220	1.45	1.85	120V~ 60Hz

If you should have any operation questions, contact us toll-tree at 1-800-295-4448.